




PROXPRO WIEGAND/CLOCK-AND-DATA

INSTALLATION GUIDE

5355A-900, Rev. N.3

November 2016

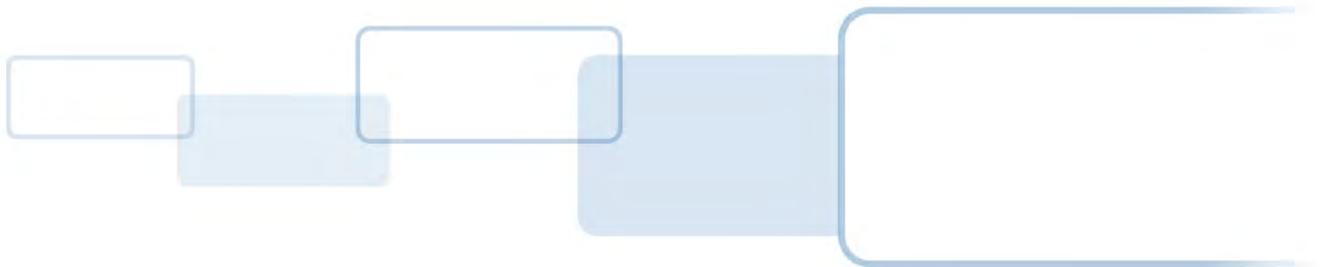



Copyright

©2007 - 2016 HID Global Corporation/ASSA ABLOY AB.

All rights reserved. This document may not be reproduced, disseminated or republished in any form without the prior written permission of HID Global Corporation.

Trademarks

HID GLOBAL, HID, the HID logo, and ProxPro are the trademarks or registered trademarks of HID Global Corporation, or its licensors, in the U.S. and other countries. All other trademarks, service marks, and product or service names are trademarks or registered trademarks of their respective owners.

Revision History

| Date | Description | Version |
|---------------|---|---------|
| November 2016 | Additional information in section 2 for opt 14 operation. | N.3 |
| November 2016 | Updated section 2 with warning notice. | N.2 |

Contacts

For additional offices around the world, see www.hidglobal.com corporate offices.

North America

611 Center Ridge Drive
Austin, TX 78753
USA
Phone: 866-607-7339
Fax: 949-732-2120

Asia Pacific

19/F 625 King's Road
North Point, Island East
Hong Kong
Phone: 852 3160 9833
Fax: 852 3160 4809

Europe, Middle East and Africa

Haverhill Business Park Phoenix Road
Haverhill, Suffolk CB9 7AE
England
Phone: 44 (0) 1440 711 822
Fax: 44 (0) 1440 714 840

Brazil

Condomínio Business Center
Av. Ermano Marchetti, 1435
Galpão A2 CEP 05038-001
Lapa - São Paulo/SP
Brazil
Phone: 55 11 5514-7100

HID Global Customer Support: www.hidglobal.com/support

Contents

| | | |
|----------|--|-----------|
| 1 | System Overview | 4 |
| 1.1 | Operation..... | 4 |
| 1.2 | Parts List | 4 |
| 2 | Installation Procedure | 5 |
| 3 | Wiring | 6 |
| 3.1 | Standard Wire Connections..... | 6 |
| 3.2 | Buffered Direct Wire Connections - Option D | 6 |
| 3.3 | Direct Wire Connections - Option S..... | 6 |
| 4 | Switch Configuration | 7 |
| 4.1 | Switch 1-1 Hardware Identity | 8 |
| 4.2 | Switch 1-2 Audible Tone Control | 8 |
| 4.3 | Switch 1-3 Green LED Control..... | 8 |
| 4.4 | Switch 1-4 Keypad Operation | 8 |
| 4.5 | Switch 1-5 Single / Dual LED Control..... | 8 |
| 4.6 | Switch 1-6 and 1-7 Data Output Biasing | 9 |
| 5 | K Version - Internal Keypad p\Processing | 10 |
| 5.1 | Parity Option | 10 |
| 5.2 | Length Buffer Keys Option | 10 |
| 5.3 | User Interface | 10 |
| 5.4 | Keypad Message..... | 10 |
| 5.5 | Keypad Scanning 2 of 7 | 11 |
| 5.6 | Key Pad Data Table 2 of 7..... | 11 |
| 6 | S Version - Direct Connect Keypad Scanning | 12 |
| 7 | D Version - Buffered Direct Connect Keypad Scanning | 12 |
| 8 | Specifications | 13 |
| 9 | Product Configuration/Ordering Options | 15 |

1 System Overview

The ProxPro® reader is a self-contained proximity reader. The two-piece polycarbonate enclosure has a rubber Gasket that seals the pieces together and a cable fitting that seals the cable entry. The water resistant unit is approved for outdoor use. The enclosure is designed to fit on a single gang electrical box. A Bi-color LED and audible tone enhance user feedback. A tamper switch feature is available that will alert the Host when the enclosure is opened. An internal DIP switch sets the configuration of the outputs, audible tone, keypad and LED control options simple.

Installation of the ProxPro reader consists of mounting, verifying the DIP switch settings, setting a tuning jumper and connecting the cable to the Host.

1.1 Operation

Access Cards may be presented to either the front or the back of the reader. Optimum read range is achieved when the access card is presented face on, and parallel to the reader face. The LED is normally controlled by the internal reader firmware. Alternatively, the LED can be controlled by the access control host panel. When the LED is controlled directly by the reader, the LED normal state is red, and indicates that the reader is ready to read an access card. The LED turns green when the access card is read and the message is transmitted to the Host system. When the reader is ready for another access card, the LED returns to red. The typical time the LED is green is 250 milliseconds. The reader only controls the green state of the LED; there is no amber LED state. The operation of the LED may be controlled by the Host. When the LED is host system controlled, the LED and beeper operation may vary depending on the particular host software. The LED may then exhibit a red, green or “amber” color for certain status conditions as controlled by that host’s software.

1.2 Parts List

| | | |
|---|--|--|
| 1 | ProxPro Reader | qty 1 (included) |
| 2 | #6-32 x 1 self tapping screws, Type T or 23 | qty 2 (included) |
| 3 | Installation Manual | qty 1 (included) |
| 4 | Cable Fitting | qty 1 (included) |
| 5 | Cable, 5 conductor, 22awg (Alpha 1295 C or equivalent) | as required (max. 500 feet) See cable notes |
| 6 | Cable, 20 conductor, 22awg (Alpha 1299/20C or equivalent) | as required (max. 500 feet) See cable notes |
| 7 | DC Power Supply 12V/100mA or 24V/120mA | 1 (Installer supplied) |
| 8 | Recommended power supply in the E.U. is the Micro State Electronics Model PS-5 | |

2 Installation Procedure

IMPORTANT: Before Keypad Reader is powered up in step #10, the keypad portion of the reader MUST be attached.

1. Determine an appropriate **mounting position** for the reader. The reader drawing below is actual size and may be used as a template. Install a single or double gang electrical box, or drill the appropriate mounting for #6 fasteners. If mounting to a metal surface, drill two 7/64 (.109) inch holes and use the enclosed self-tapping screws for mounting.
2. **Route** the interface **cable** from the reader and/or power supply to the Host.
3. **Prepare the cable** by cutting the cable jacket back two (2) inches and strip the wires 1/4 inch. Tinning the wires is not required.
4. Pry off the center faceplate by placing a thin blade into the groove that outlines the face of the reader. **Use care to avoid scratching the surface of the reader.** The faceplate is attached to the reader by friction only. The screws holding the enclosure together will be exposed. Loosen the four screws to open the enclosure (screws are captive to the cover).
5. **Install the cable** fitting on the rear of the reader. Feed the cable through the cable fitting; tighten the fitting nut so the cable jacket is flush with the printed circuit board. Dress the cable conductors and connect the reader to the Host, according to the terminal descriptions in the dimension diagram and wiring table. The descriptions are on the PCB guard in the reader. Connect the drain line of the shield to terminal 2 (Power Supply Ground). Terminal 5 (Data Return), is to be connected to the ground of the Host, if the power supply ground is not common with the Host. The opposite end of the drain line should be cut flush with the jacket and left disconnected.
6. If the **tamper feature** is available on the Host, connect the tamper switch using the connections recommended by the Host documentation. The switch is a single pole, double throw. When the inner reader cover is removed, the tamper switch is released. The TB1 connections to the tamper switch are Pins 10 and 11. Pin 10 is the common contact of the switch, and Pin 11 is either the *normally open* or *normally closed*. Jumper P3 selects the contact of the tamper switch, either the *normally closed* or the *normally open* contact. The default position is P3 across Pins 1 and 2. This selects the *normally open* contact on TB1 Pin 11. If the *normally closed* contact is required, move P3 across Pins 2 and 3.
Note: *normally open* and *normally closed* refer to the Pin 11 status while the cover is removed. The contacts are rated for 100mA at 35 VDC.
7. **Mount the base** of the reader that holds the electronics to the gang box or surface using the two holes located on the center axis of the reader. Two #6-32 x 1 inch screws are provided for mounting to a gang box or metal surface.
8. Set the DIP switches according to the table in the section, **DIP Switch Settings**.
9. Place the jumper on P1 between Pins 1 & 2 when **mounting to a metallic surface** or to a junction box with a metal cover plate. Otherwise, it should be between Pins 2 & 3 (default).
10. **Replace the top cover** and faceplate.
11. After wiring the Reader and power supply, the Reader is ready to be tested. **Power up the Reader;** the LED and Beeper will flash and beep 3 times (sequence of two short delays and one long delay). This indicates that the micro-controller unit is working properly.
Note: If the switches have been set for external control only, the Reader will have a sequence of 3 shorts and a long. Present an ID card to the Reader and the LED should momentarily turn green, indicating a read of the card. If the Reader LED is controlled by the Host, refer to the Host description of the LED operation.
12. If the reader is a 5355AXK14 keypad reader, as the Reader initializes, the Red LED flashes and the beep sounds. The Red LED will remain on, unless the reader was previously configured to be off. If the configuration is the factory default the reader will beep and flash Red twice, pause and beep/flash one more time and the Red LED will remain on. The reader will default to Facility Code 0 unless specified otherwise at time of ordering. If you need a different Facility Code you will need to obtain Configuration Card ANK14 to modify it in the field.

3 Wiring

3.1 Standard Wire Connections

| TB1 | | | | | | | | | | |
|-----|--------|----------------|----------------|------------------|--------------|------------|--------|----------------------|------------------|------------------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 |
| +DC | Ground | Data0/ Data | Data/ Clock | Shield Ground | Green LED | Red LED | Beeper | Hold/Card Present | Tamper Common | Tamper Select |
| Red | Black | Green | White | Violet | Orange | Brown | Yellow | Blue | -- | -- |

3.2 Buffered Direct Wire Connections - Option D

| 10 | 11 | E1 | E2 | E3 | E4 | E5 | E6 | E7 | E8 | E9 | E10 |
|------------------|------------------|----------------|-----------------|-------|--------|-----------------|-------|-------------|-----------------|------------------|-------------------|
| Tamper Common | Tamper Select | +DC | Ground | Row 1 | Row 2 | Row 3 | Row 4 | Column 1 | Column 2 | Column 3 | Select Low |
| Red / Black | Red / Green | White / Red | White/ Black | Gray | Violet | Red / Yellow | Pink | Tan | White / Blue | White / Green | White / Yellow |

3.3 Direct Wire Connections - Option S

| TB2 | | | | | | |
|-------|-------|-------|-------|----------|----------|----------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| Row 1 | Row 2 | Row 3 | Row 4 | Column 3 | Column 2 | Column 1 |
| Red | Black | Green | White | Drain | Orange | Brown |

Notes:

1. When using **5 conductor cable**, the power supply and Host must have a **common ground** (voltage reference).
2. **6 conductor cable** is required when controlling the red and green LED (Alpha 1296 C or equivalent).
3. **7 conductor cable** is required when both green and red LED's are controlled by the Host and the power supply and Host "ground" are separate (Alpha 1297 C or equivalent).
4. A 22 AWG twisted pair, shielded, stranded cable is often required for the **tamper switch**. Follow the recommendations of the manufacturer of the Host system. If the tamper input is a supervised input the "end of line" resistors may be mounted in the enclosure. Use extreme care and shield any bare wire from the printed circuit assembly and its components.
5. The inner diameter of the cable fitting will accommodate a cable with an outer diameter of **.300** inches (nominally).
6. **Connect cable shield** by connecting drain wire to TB1-2 ground. Leave foil and drain wire disconnected at host end of cable by cutting them off at the end of the cable jacket.
7. When using the Buffered Direct Connect ProxPro with a **20 conductor** cable, DC+ and Power (Red and White / Red wires) must have a common connection to the host +DC power supply. The two ground wires (Black and White / Black) must have a common ground connection to the host +DC power supply.

4 Switch Configuration

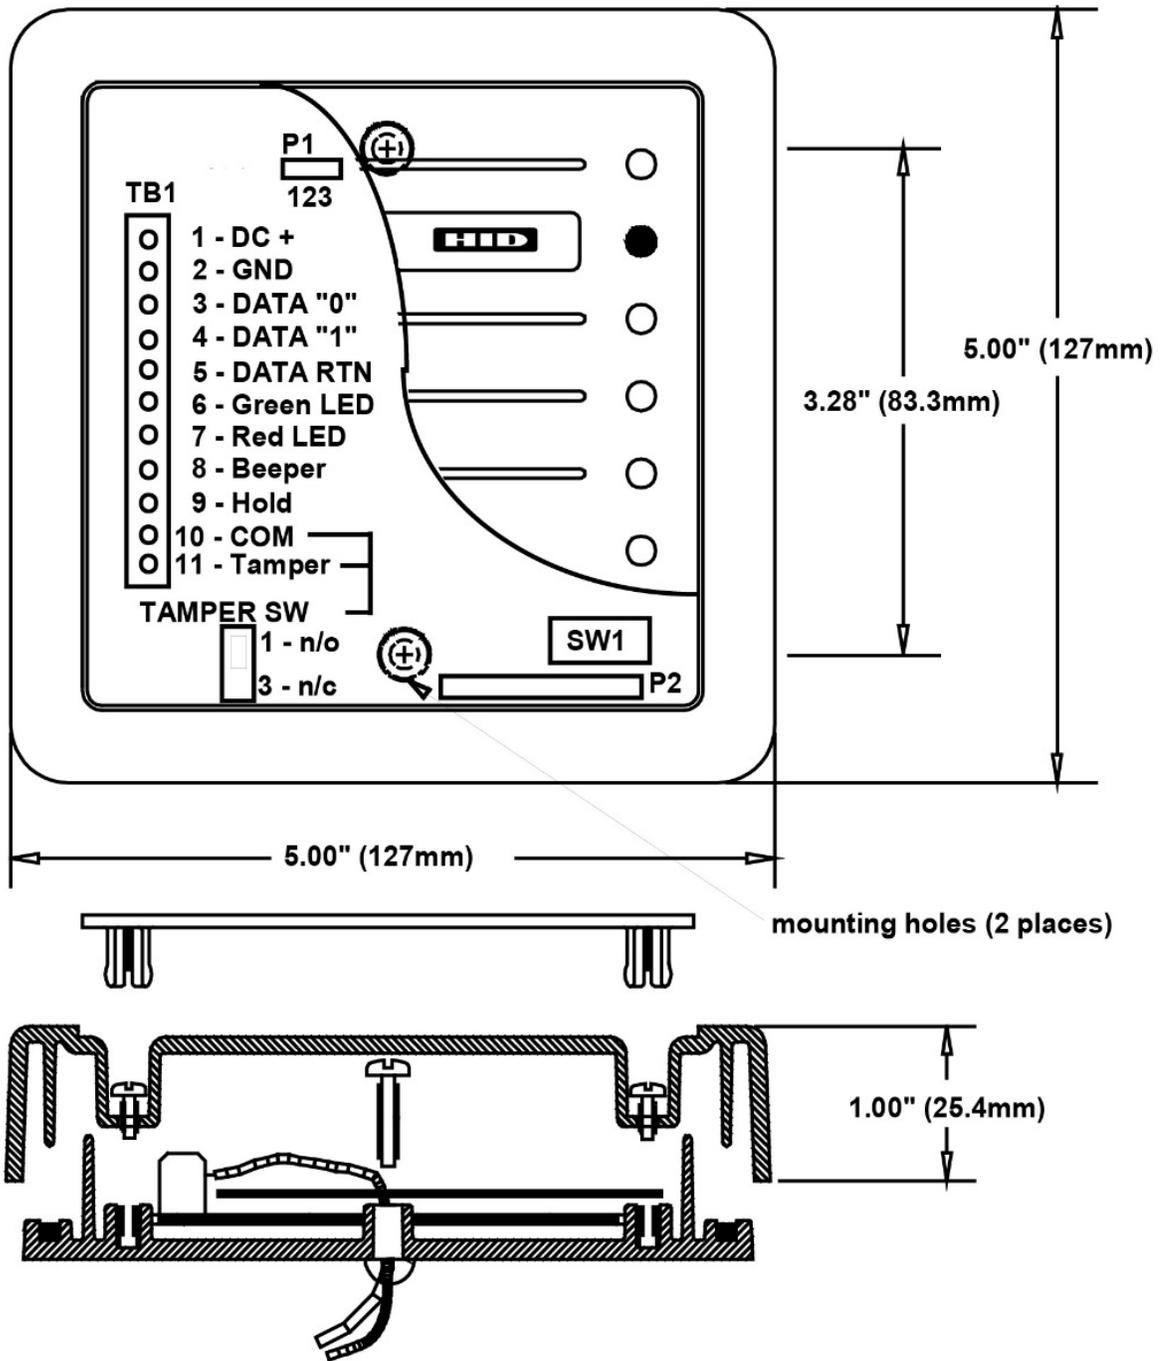


Figure 1 DIP Switch Settings - Switch 1

4.1 Switch 1-1 Hardware Identity

When set in the **ON** position, the unit is configured for "Wiegand" interface. The **OFF** position configures the unit for **Clock-and-Data** interface.

4.2 Switch 1-2 Audible Tone Control

The Audible Tone (Beeper) may be enabled or disabled to sound when an access card is read. When enabled, the audible tone is sounded when a card is successfully read. When the Beeper is disabled, the only method to activate the Beeper is to use the external Beeper control line. The Beeper will turn on when the control line is switched to ground. Switch 2 in the **ON** position enables the audible tone (default).

4.3 Switch 1-3 Green LED Control

The Green LED can be configured to turn on, or not turn on when an access card is read. Switch 3 in the **OFF** position selects the Green LED to be turned **ON** (default).

4.4 Switch 1-4 Keypad Operation

The keypad inputs may be processed by the reader or may be connected directly to the Host. When the keypad inputs are processed by the reader, the reader scans the keypad and outputs the keypad entries over the "Wiegand" interface. When the keypad is connected to the Host, the Host determines which key is being entered. Switch 4 is in the **ON** position for the default mode (keypad inputs are processed by the reader).


4.5 Switch 1-5 Single / Dual LED Control

In Single LED Control the LED is Red. When an access card is read, the LED toggles Green, and then back to Red. Grounding the Green LED Control line will change the LED from Red to Green. The reader maybe configured so the Green LED is externally controlled independently from the Red LED. This is referred to as Dual LED Control. When the Red or Green LED Control line is switched to **Ground**, the respective LED is turned on. If both LEDs are on, the LED appears to glow amber. Switch 5 in the **OFF** position selects Single LED Control (default).

4.6 Switch 1-6 and 1-7 Data Output Biasing

The data outputs may be configured as open collector or biased at 5VDC through 1k Ohm resistors by the reader. The default (standard) configuration is output biasing, with switches 6 and 7 **ON**.

Note: When the outputs are configured as open collector, the host panel should provide bias voltage at the panel inputs.

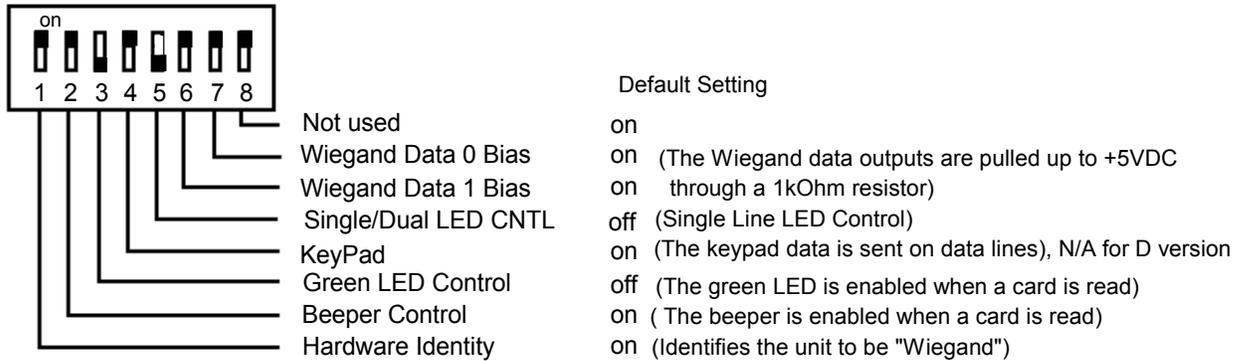

Notes:

This section of this document describes the keypad interface. The keypad has twelve keys, four rows by three columns. The characters 0 to 9, # and * are arranged the same as a standard telephone keypad. There are two methods for interfacing to the Keypad.

The first configuration (K version, internal keypad) processes the keypad entries in the reader and then transmits the data to the host system via the Wiegand data lines. The reader outputs each key as an ASCII encoded hexadecimal digit. The decoding of the message sent through the Wiegand interface is the only processing required of the host system. The user interface has been implemented in the most generic fashion to give the integrator the most flexibility.


The Second configuration (S version, direct connect keypad), the host must scan the keypad directly using a separate cable.

5 K Version - Internal Keypad p\Processing

Parity and Length options must be factory configured. Contact customer service to enable these options.

5.1 Parity Option

The default does not included parity in the data message. When the parity option is enabled, parity is added to the total message independent of length. The parity coverage is diagrammed below. Each parity bit covers exactly one half of the message.

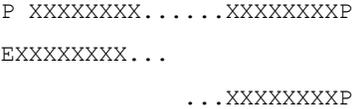

5.2 Length Buffer Keys Option

The length option chooses the number of key entries that will be buffered before the message is sent to the host. The maximum number of entries is 10 with parity and 11 without parity. When the option is set for multiple entries the reader has a five (5) second timer that will clear all entries after five seconds has expired between entries. The length option requires the user to enter the programmed number of key entries. Upon completion of the last key entry, the message is assembled and sent. Parity is added if the option is set. This requires the system integrator to configure the reader for the number of key entries before installation.

5.3 User Interface

The user is able to press keys at any time. Card reads and key entries are independent of each other; the user is not required to follow any sequence, unless specified by the system integrator. The reader is equipped to give the user audible, visual and tactile feedback when a key is pressed. The amount of time is five (5) seconds between key entries when the multiple key entry option is used. If the time expires between key entries, all keys entered are cleared and the user must start the sequence from the beginning.

5.4 Keypad Message

The keypad message follows a basic format. The entries are transmitted in the hexadecimal representation. When parity is added, the message format mimics the "standard 26 bit Wiegand format". The key that is pressed is represented in Hexadecimal with * represented by A (HEX) and # represented by B (HEX).

| | | |
|----------|----------|----------|
| 0 = 0000 | 4 = 0100 | 8 = 1000 |
| 1 = 0001 | 5 = 0101 | 9 = 1001 |
| 2 = 0010 | 6 = 0110 | * = 1010 |
| 3 = 0011 | 7 = 0111 | # = 1011 |

Example without parity:

```
AAAA BBBB CCCC DDDD ..... KKKK
```

- AAAA = The first key entered
- BBBB = Second key entered
- KKKK = Eleventh key entered (maximum)

Example with parity:

A message that has a fixed number of key entries set to 4 and the parity option included.

```
P AAAA BBBB CCCC DDDD P
```

- A - First key entered
- B - Second key entered
- C - Third key entered
- D - Fourth key entered
- P - Parity Bits

The whole message is similar to the "Standard 26 Bit Wiegand" formatted message. The format consists of two parity bits at the opposite ends, one odd and the other even. Each parity bit covering exactly one-half of the message.

```
P XXXXXXXX.....XXXXXXXXXP
XXXXXXXXX...
...XXXXXXXXXP
```

5.5 Keypad Scanning 2 of 7

This mode requires a separate cable to be supplied that connects to the Keypad board, inside the ProxPro, to the Host via P2. P2 is a 7 position terminal strip. Switch 1-4 (SW1-4) should be switched to the **OFF** position. The reader will then NOT process the keypad data, and it will be decoded by the host in 2 of 7 format.

The keypad has a matrix of contacts corresponding with the matrix of keys. The contact outputs are wired to the seven terminals of P2. The seven terminals are called P2-1 thru P2-7 and provide the 2 of 7 decode of the buttons. When a key is pressed, the button closes two contacts that pull two (2) lines to ground. The results of the key entries are in the table below. The reader and the host that is scanning the keypad will require a common signal ground. The connection is to be made on either Pin 2 (Power Supply Ground) or Pin 5 (Data Return) of TB1 of the ProxPro.

This method of interfacing the keypad requires additional processing by the Host. These include the de-bouncing of the keys, decoding of the keypad, and timing between key entries, as well as others depending on the Host. The 2 of 7 format is available on the ProxPro 5355XXKXX versions.

5.6 Key Pad Data Table 2 of 7

| Key # | Terminal Number | | | | | | |
|-------|-----------------|------|------|------|------|------|------|
| | P2-1 | P2-2 | P2-3 | P2-4 | P2-5 | P2-6 | P2-7 |
| 1 | LO | HI | HI | HI | HI | HI | LO |
| 2 | LO | HI | HI | HI | HI | LO | HI |
| 3 | LO | HI | HI | HI | LO | HI | HI |
| 4 | HI | LO | HI | HI | HI | HI | LO |
| 5 | HI | LO | HI | HI | HI | LO | HI |
| 6 | HI | LO | HI | HI | LO | HI | HI |
| 7 | HI | HI | LO | HI | HI | HI | LO |
| 8 | HI | HI | LO | HI | HI | LO | HI |
| 9 | HI | HI | LO | HI | LO | HI | HI |
| * | HI | HI | HI | LO | HI | HI | LO |
| 0 | HI | HI | HI | LO | HI | LO | HI |
| # | HI | HI | HI | LO | LO | HI | HI |

HI - represents a voltage of +5 volts in reference to the ProxPro ground.

LO - represents the ProxPro ground.

Note: The system is to be used on a single point ground system.

6 S Version – Direct Connect Keypad Scanning

The ProxPro reader is available with a 3 x 4 matrix keypad. The keypad is independent of the ProxPro reader and only provides the connections to the keypad. This mode requires a separate cable to be supplied that connects to the Keypad board, inside the ProxPro, to the Host via P2. P2 is a 7 position terminal strip. The following is the table for the contact closures.

This table indicates the connection between the connector pins when a key is pressed. For example, if key 3 is pressed P2-5 is connected (shorted) to P2-1. This is available on the Serial ProxPro 5355XXSXX versions.

| Rows | Columns | | |
|------|---------|------|------|
| | P2-5 | P2-6 | P2-7 |
| P2-1 | 3 | 2 | 1 |
| P2-2 | 6 | 5 | 4 |
| P2-3 | 9 | 8 | 7 |
| P2-4 | # | 0 | * |

7 D Version – Buffered Direct Connect Keypad Scanning

The ProxPro reader is available with a 3 x 4 matrix keypad. The keypad is independent of the ProxPro reader and only provides a voltage output from the keypad. This mode requires a separate cable to be supplied that connects to the Keypad wiring to the host. This method of interfacing the keypad requires additional processing by the host. This includes toggling the select low line to ground to enable the keypad, de-bouncing of the keys, decoding of the keypad voltages, and timing between key entries, as well as others depending on the host.

This table indicates the voltage on the keypad wires when a key is pressed. This is available on the Buffered Direct Connect ProxPro 5355XXDXX versions.

Table 1: Buffered Direct Connect Keypad Data

| Key # | Wire Colors | | | | | | |
|-------|-------------|--------|--------------|------|-----|--------------|---------------|
| | Gray | Violet | Red / Yellow | Pink | Tan | White / Blue | White / Green |
| 1 | LO | HI | HI | HI | LO | HI | HI |
| 2 | LO | HI | HI | HI | HI | LO | HI |
| 3 | LO | HI | HI | HI | HI | HI | LO |
| 4 | HI | LO | HI | HI | LO | HI | HI |
| 5 | HI | LO | HI | HI | HI | LO | HI |
| 6 | HI | LO | HI | HI | HI | HI | LO |
| 7 | HI | HI | LO | HI | LO | HI | HI |
| 8 | HI | HI | LO | HI | HI | LO | HI |
| 9 | HI | HI | LO | HI | HI | HI | LO |
| * | HI | HI | HI | LO | LO | HI | HI |
| 0 | HI | HI | HI | LO | HI | LO | HI |
| # | HI | HI | HI | LO | HI | HI | LO |

HI - represents a voltage of +5 volts in reference to the ProxPro ground.

LO - represents the ProxPro ground.

Notes:

1. The system is to be used on a single point ground system.
2. On the Buffered Direct Connect toggle, select **Low** (White/Yellow) wire to ground to enable the above keypad outputs.

8 Specifications

Read Distance - using PROXCARD II®

- Overall Operating Limits, minimum (@12VDC) 5.0 inches (12.7 cm)
- Non-Metallic Mounting, typical (@12VDC) 8.0 inches (20.3 cm)
- Mounted on Metal, typical (@12VDC) 5.5 inches (14 cm)
- Overall Operating Limits, minimum (@24VDC) 5.5 inches (14 cm)
- Non-Metallic Mounting, typical (@24VDC) 9.0 inches (23 cm)
- Mounted on Metal, typical (@24VDC) 6.0 inches (15.2 cm)

Environmental Characteristics

- Designed for listing under UL 294 "Standard for Access Control System Units"
- Operating Temperature Range -30 to 65°C (-22 to 150°F)
- Storage Temperature Range -40 to 85°C (-40 to 185°F)
- Operating Humidity Range 5 to 95% non-condensing
- Operating Vibration Limit .04 g²/Hz 20-2000Hz
- Operating Shock Limit 30g, 11mS, Half Sine
- Enclosure Material UL Recognized Lexan® Polycarbonate
- Weight 11.3oz (310gms)

Power Requirements

- Power supply Linear type recommended
- Operating Voltage Range (+DC) 10VDC -28.5VDC
- Maximum Average Current 12V/24V 90mA/155mA
- Transient Protection (all terminals) UL 294
- Reverse Voltage Protection YES
- Input Voltage (Maximum Data-0/1 Lines) 28.5VDC
- Input Voltage (Maximum Interface Lines) 28.5VDC

Option D - Buffered Direct Connect Keypad


- Operating Voltage Range (+DC) 10VDC -26VDC
- Input Voltage (Maximum Data - 0/1 Lines) 14VDC
- Input Voltage (Maximum Interface Lines) 14VDC

Operating Parameters

- Excitation Frequency 125KHz
- Duty Cycle (alternate power level rate) 20% @ 60mS period
- Read & Report Speed (26 bit Wiegand Card) 175mS
- Maximum Cable Distance to Host 500 feet (152 meters)
- LED Type Bi-colored Red/Green
- LED Operation (host control of red/green) <.5V on LED control line
- Beeper Operation (host control) <.5V on beeper line
- LED Control (default) internal/single
- Beeper Control (default) Beeper enabled
- Anti-Pass Back Delay (default) 1 second
- Wiegand Data Pulse Widths (default) 40uS
- Wiegand Data Interval (default) 2mS
- Clock/Data bit time 1.5ms (default)
- Clock/Data strobe width bit time/3 (33% of bit time), default = 500us
- Clock/Data clock/strobe is valid 1.5ms (one clock cycle, min) after card is present
Asserted data is valid 10us (min) before the negative edge of clock/strobe card present returns to the high level 50 ms (max) after the last clock/strobe.

9 Product Configuration/Ordering Options

5355 A G N00 -XXXX Y

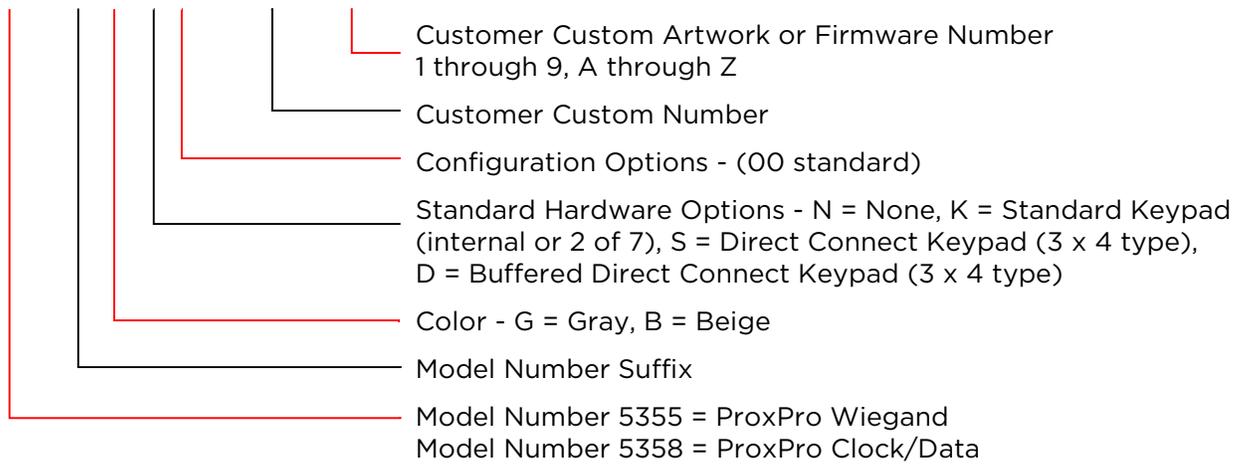

Final Assembly Number = 5355-300-XX Changes with Revisions

- FCC Compliance Statement: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
 - This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
- For proper regulatory compliance, the drain wire should be disconnected at the power supply end of the cable.
- The Reader is intended to be powered from a limited source output of a previously certified power supply.
- Changes of modifications not expressly approved by the responsible for compliance could void the user's authority to operate the equipment.

Note: The above are recommended installation procedures. All Local, State and National Electrical Codes take precedence.

