


# PIVCLASS®

## HOW TO ORDER GUIDE

PLT-01964, Rev. A.9  
July 2019

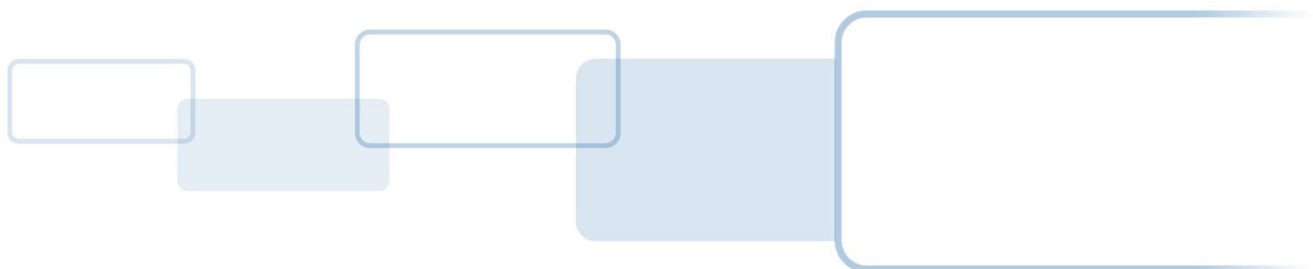

## Copyright

© 2010 - 2019 HID Global Corporation/ASSA ABLOY AB. All rights reserved. This document may not be reproduced, disseminated or republished in any form without the prior written permission of HID Global Corporation.

## Trademarks

HID GLOBAL, HID, the HID Brick logo, the Chain Design, iCLASS, iCLASS SE, OMNIKEY, and pivCLASS, are the trademarks or registered trademarks of HID Global, ASSA ABLOY AB, or its affiliate(s) in the US and other countries and may not be used without permission. All other trademarks, service marks, and product or service names are trademarks or registered trademarks of their respective owners.

MIFARE, MIFARE Classic, MIFARE DESFire, and MIFARE DESFire EV1, are registered trademarks of NXP B.V. and are used under license.

## Revision History

Date	Description	Revision
July 2019	Updated for per pivCLASS 5.6 & 5.7 release. New Feenics plugin, updated version of PAM. Corrected reader part numbers.	A.9
March 2018	Corrected part numbers, added versions to plug-in section, simplified reader section.	A.8
June 2016	Added pivCLASS Strong Authentication OSDP readers - LCD Contact.	A.7
February 2016	Updated bundled part number.	A.6
February 2016	New MS part number for "Bundles", added certification training required for Validation Workstation, fixed MultiPACS connector part number error, deleted Datastrip handheld reader page, added workstation to Certificate Training page, removed Evaluation Kits.	A.5
October 2015	New supplemental info page, added biometric bundle, removed R15 and RP15 readers (no longer sold), removed discontinued color offerings, deleted PIV Audit Card kit (superseded by NIST test cards), PAM purchase now includes Reader Services component.	A.4
March 2015	Removed the HDX Wiegand mode reader part numbers. Updated vendor plug-ins.	A.3

## Contacts

For additional offices around the world, see <https://www.hidglobal.com/contact/corporate-offices>.

Americas and Corporate	Asia Pacific
611 Center Ridge Drive Austin, TX 78753 USA Phone: 866 607 7339 Fax: 949 732 2120	9/F 625 King's Road North Point, Island East Hong Kong Phone: 852 3160 9833 Fax: 852 3160 4809
Europe, Middle East and Africa (EMEA)	Brazil
Haverhill Business Park Phoenix Road Haverhill, Suffolk CB9 7AE United Kingdom Phone: 44 (0) 1440 711 822 Fax: 44 (0) 1440 714 840	Condomínio Business Center Av. Ermano Marchetti, 1435 Galpão A2 - CEP 05038-001 Lapa - São Paulo / SP Brazil Phone: +55 11 5514-7100

HID Global Technical Support: [www.hidglobal.com/support](http://www.hidglobal.com/support)



# Contents

<b>Introduction .....</b>	<b>5</b>
<b>Reseller Certification .....</b>	<b>5</b>
<b>Reader Configuration Choices .....</b>	<b>5</b>
<b>Reader Part Number Configuration Aides.....</b>	<b>5</b>
<b>pivCLASS Readers - FDX; Wiegand or PAM Mode .....</b>	<b>6</b>
<b>pivCLASS Readers - HDX; Wiegand or OSDP.....</b>	<b>7</b>
<b>pivCLASS Bundles.....</b>	<b>8</b>
<b>Validation Workstation.....</b>	<b>9</b>
<b>Maintenance and Support.....</b>	<b>9</b>
<b>Registration Engine and Certificate Manager.....</b>	<b>10</b>
<b>Maintenance and Support.....</b>	<b>10</b>
<b>Reader Services.....</b>	<b>11</b>
<b>Maintenance and Support.....</b>	<b>11</b>
<b>pivCLASS Authentication Module (PAM) .....</b>	<b>12</b>
<b>pivCLASS Passage.....</b>	<b>13</b>
<b>Maintenance and Support.....</b>	<b>13</b>
<b>pivCLASS IDPublisher.....</b>	<b>14</b>
<b>Maintenance and Support.....</b>	<b>14</b>
<b>pivCLASS MultiPACS.....</b>	<b>15</b>
<b>Maintenance and Support.....</b>	<b>15</b>
<b>pivCLASS Mobile Validation Software .....</b>	<b>16</b>
<b>Maintenance and Support.....</b>	<b>16</b>



- pivCLASS Data Import..... 17**
  - Maintenance and Support.....17
  
- USB Readers & Credential Testing Aides..... 18**
  - USB Reader and Biometric Sensor .....18
  - Credential Testing Aides.....18
  
- Certification Training ..... 19**
  
- Reader Programming Cards ..... 20**
  - Reader Configuration Cards.....20
  - Firmware Update Cards .....20
  
- Reader Accessories..... 21**
  
- pivCLASS PACS Plug-in & Connector Information.....22**
  
- pivCLASS Supplemental Ordering Information.....23**



## Introduction

---

The HID Global® pivCLASS® solutions portfolio is an extensive product family designed to support authentication of FIPS 201 compliant smart cards such as PIV, PIV-I, CIV, CAC, FRAC, and TWIC in both government and non-government environments. Using FIPS 201 compliant cards for physical access control results in interoperability, high security and compliance with government regulations where required.

The pivCLASS modular approach provides government agencies the ability to use their PIV identity cards for strong Public Key Infrastructure (PKI)-based validation for physical access control. The solution enables this functionality without the need to rip and replace existing Physical Access Control Systems (PACS), reducing costs, and removing complexities to make it easy and affordable to acquire, install and maintain compliant physical access control systems.

pivCLASS accomplishes this in part by communicating with an agency's PACS and external trust authority PKIs to deliver functionality specified by National Institute of Standards and Technology (NIST) Federal Information Processing Standards Publication 201 (FIPS 201).

Ordering information for all pivCLASS components are included in this How to Order Guide.

## Reseller Certification

---

You must be a pivCLASS certified reseller to order any pivCLASS solution components except pivCLASS readers. Achieve certification when a minimum of two staff members successfully completing the pivCLASS training program

## Reader Configuration Choices

---

pivCLASS readers can be ordered to support three different modes of operation:

**Wiegand:** In Wiegand mode, the reader reads the FASC-N or UUID from the card and passes this data directly to the door controller or panel over a Wiegand interface. Configure the FASC-N output to provide various output formats including 64 bit BDC, 75 bit GSA, 128 bit reversed BCD and 200 bit full FASC-N. The UUID output is always 128 bits. Custom output formats are available, but some of these may not be supported in PAM mode. In Wiegand mode, no authentication is performed. This mode is provided only to enable a phased implementation approach. If the end state is to use a PAM select full-duplex (FDX) RS-485 communication protocol. For all other end states select half-duplex (HDX).

Reconfigure these readers in the field to change mode. For example, use the following two-step process to reconfigure from Wiegand to PAM mode:

- Connect the reader to the PAM.
- Reconfigure the reader to PAM mode using a pivCLASS Reader Programming Card.

**PAM:** in this mode the reader is connected to a pivCLASS Authentication Module (PAM) using RS485 full-duplex (FDX) communication protocol. This mode supports CHUID, CAK (Card Authentication Key), PIV+PIN, PIV+PIN+BIO authentication, as defined in FIPS 201, depending on the capabilities of the reader (that is, contactless, contact or biometric). This mode also supports the additional TWIC authentication modes CHUID + BIO and CAK + BIO.

**HDX OSDP:** in this mode the reader is connected directly to a panel or intelligent controller that supports RS485 half-duplex (HDX) and OSDP. This mode supports CHUID, CAK (Card Authentication Key), PIV+PIN, PIV+PIN+BIO authentication, as defined in FIPS 201, depending on the capabilities of the reader (that is, contactless, contact or biometric). This mode also supports the additional TWIC authentication modes CHUID + BIO and CAK + BIO.

## Reader Part Number Configuration Aides

---

In addition to this document, HID Global provides an online tool, the pivCLASS Configuration Guide, for determining the part number for various pivCLASS readers. To access this tool, go to <http://www.hidglobal.com/node/19914>, open with Excel, and click **SELECT** to make a selection from the available pivCLASS readers.

# pivCLASS Readers – FDX; Wiegand or PAM Mode

Order these readers if currently, or in the future, connecting the pivCLASS reader directly to a PAM. Use of the online [pivCLASS Configuration Guide](#) if you need further guidance on part numbers. You do not need to be pivCLASS certified to resell pivCLASS readers.

\*Configuration settings below are PAM mode readers, please refer to configuration guide for Wiegand variants.

Description	Part Number								
	Base Part No.	125 kHz Option <sup>1</sup>	13.56 MHz	Controller Communication <sup>2</sup>	Controller Connection	Version	Color	Keypad <sup>3</sup>	Configuration Setting*
<b>pivCLASS R10 &amp; RP10</b> Mini-Mullion Contactless Reader.	900	N = Without Prox	H (contactless)	R = RS485 FDX	N = Pigtail T = Terminal Strip	E	K = Black	O = Standard E = Elite	If No Prox = 032Y If Prox = 0007
<b>pivCLASS R40 &amp; RP40*</b> Wall Switch Contactless Reader.	920	P = With Prox							
<b>pivCLASS RK40 &amp; RPK40*</b> Wall Switch Contactless Keypad Reader Keypad.	921	N = Without Prox P = With Prox	H (contactless)	R = RS485 FDX	N = Pigtail T = Terminal Strip	E	K = Black	O = Standard E = Elite	If No Prox = 033A If Prox = 033B
<b>pivCLASS RKCL40 &amp; RPKCL40</b> Wall Switch Contact/Contactless Keypad Reader with LCD display.	923	N = Without Prox P = With Prox	P (contact + contactless)	R = RS485 FDX	N = Pigtail T = Terminal Strip	E	K = Black	O = Standard E = Elite	If No Prox = 032V If Prox = 000B
<b>pivCLASS RKCLB40</b> Wall Switch Contact/Contactless Keypad Reader with LCD display and biometric sensor.	924	N = Without Prox	P (contact + contactless)	R = RS485 FDX	N = Pigtail T = Terminal Strip	E	K = Black	O = Standard E = Elite	0504

**<sup>1</sup> 125 kHz Prox Interpreters**

Order P for HID® Prox, AWID, EM4102.

All pivCLASS readers support high frequency 13.56 MHz technology.

**<sup>2</sup> Controller Communication**

Full duplex (FDX) is required when connecting a pivCLASS reader to a PAM.

**<sup>3</sup> iCLASS® Keypad Options (Factory or Field Configurable)**

O = Standard Security (Version 1) Keypad – compatible with iCLASS SE®, iCLASS SR, standard iCLASS, SE for MIFARE Classic and SE for MIFARE DESFire EV1 credentials.

E = Elite, reads only SE Elite credentials with unique matching keys – compatible with iCLASS SE, iCLASS SR, standard iCLASS, SE for MIFARE Classic, and SE for MIFARE DESFire EV1 with matching Elite keys. Line item on PO requires ICE reference number.

## pivCLASS Readers - HDX; Wiegand or OSDP

If you are connecting the pivCLASS reader directly to a panel or intelligent controller for use with either Wiegand, Half Duplex (HDX) OSDP, or strong authentication over OSDP use this page to construct the appropriate part number. Obtaining individual pivCLASS reader part numbers requires the use of the online [pivCLASS Configuration Guide](#). You do not need to be pivCLASS certified to resell pivCLASS readers.

\*Configuration settings below are for OSDP V2 reader with 200bit FIPS output mode readers, please refer to configuration guide for Wiegand or other variants.

Description	Part Number								
	Base Part No.	125 kHz Option <sup>1</sup>	13.56 MHz	Controller Communication <sup>2</sup>	Controller Connection	Version	Color	Keypad <sup>3</sup>	Configuration Setting <sup>4</sup>
<b>pivCLASS R10 &amp; RP10</b> Mini-Mullion Contactless Reader.	900								If No Prox = 0OUF If Prox = 0OUH
<b>pivCLASS R40 &amp; RP40</b> Wall Switch Contactless Reader.	920	N = Without Prox P = With Prox	H (contactless)	P = RS485 HDX OSDP	N = Pigtail T = Terminal Strip	E	K = Black	O = Standard E = Elite	If No Prox = 0OP1 If Prox = 0OP2
<b>pivCLASS RK40 &amp; RPK40</b> Wall Switch Contactless Keypad Reader Keypad.	921								If No Prox = 0OUG If Prox = 0OUE
<b>pivCLASS RKCL40 &amp; RPKCL40</b> Wall Switch Contact/Contactless Keypad Reader with LCD display.	923	N = Without Prox P = With Prox	P (contact + contactless)	P = RS485 HDX OSDP	N = Pigtail T = Terminal Strip	E	K = Black	O = Standard E = Elite	If No Prox = 000U If Prox = 000G

### <sup>1</sup> 25 kHz Prox Interpreters

Order P for HID Prox, AWID, EM4102.

All pivCLASS readers support high frequency 13.56 MHz technology.

### <sup>2</sup> Controller Communication

P = Supports either Wiegand or half- duplex (HDX) RS485 with OSDP. Reconfigurable in field from Wiegand to HDX RS485 using a programming card. HDX is not supported by PAM.

### <sup>3</sup> iCLASS Keypad Options (Factory or Field Configurable)

O = Standard Security (Version 1) Keypad – compatible with iCLASS SE, iCLASS SR, standard iCLASS, SE for MIFARE Classic and SE for MIFARE DESFire EV1 credentials.

E = Elite, reads only SE Elite credentials with unique matching keys – compatible with iCLASS SE, iCLASS SR, standard iCLASS, SE for MIFARE Classic and SE for MIFARE DESFire EV1 with matching Elite keys. Line item on PO requires ICE reference number.

### <sup>4</sup> Configuration Setting

Identifies all firmware configurations including Wiegand mode output settings and audio/visual settings (for example, default settings: buzzer on, LED normally red, flashes green on read, buffer one key, no parity, 4 bit message), OSDP uses default settings of panel control for all audio/visual. For use on OSDP panels using strong authentication, select OSDP V2 compliant readers. Use the pivCLASS Configuration Guide located at <http://www.hidglobal.com/node/19914> to “SELECT” from the available pivCLASS readers the specific configuration setting. Settings shown are for OSDP V2 reader with 200bit FIPS output mode readers, please refer to configuration guide for Wiegand or other variants

# pivCLASS Bundles

Bundles consist of two (2) pivCLASS readers and one (1) pivCLASS Authentication Module (PAM). pivCLASS PKI @ Door training required to resell these bundles. See *Certification Training on page 19*. First year maintenance is mandatory and included with purchase.

Include supplemental information for ordering this product. See *pivCLASS Supplemental Ordering Information on page 23*.

Description		Part Number								
		Base Part No.	125 kHz Option	13.56 MHz	Controller Communication	Controller Connection	Version	Color	Keyset	Configuration Setting
<b>pivCLASS R40 OR pivCLASS RP40</b> Contactless Smart Card Reader: Finished Reader, Wall Switch.	<b>pivCLASS Authentication Module (Model: M2000)</b> Authentication module hardware, firmware and installation guides. Includes PAM with plastic enclosure & mounting plate.	B920	N / P	H	R	N / T	E	K	O	If No Prox = 032Y If Prox = 0007
<b>pivCLASS RKCL40 OR pivCLASS RPKCL40</b> Contactless and Contact Smart Card Reader: Finished Reader, Wall Switch, Key Pad, LCD US Double-Gang Size.	<b>pivCLASS Authentication Module (Model: M2000)</b> Authentication module hardware, firmware and installation guides. Includes PAM with plastic enclosure and mounting plate.	B923	N / P	P	R	N / T	E	K	O	If No Prox = 032V If Prox = 000B
<b>pivCLASS RKCLB40</b> Contactless and Contact Smart Card Reader: Finished Reader, Wall Switch, Key Pad, LCD and biometric sensor. US Double-Gang Size.	<b>pivCLASS Authentication Module (Model: M2000)</b> Authentication module hardware, firmware and installation guides. Includes PAM with plastic enclosure and mounting plate.	B924	N	P	R	N / T	E	K	O	0504

- 125 kHz Option                      N = Without Prox; P = Support of HID Prox, AWID and EM4102 (32 bit).
- 13.56 MHz                            H = contactless only; P = contactless and contact.
- Controller Communication        R = Full duplex (FDX) RS485; required when connecting to a PAM.
- Controller Connection            N = Pigtail (18"); T = Terminal strip.
- Color                                    K = Black
- Keyset                                 O = Standard Security (Version 1) Keyset - compatible with iCLASS SE, iCLASS SR, standard iCLASS, SE for MIFARE Classic and SE for MIFARE DESFire EV1 credentials.
- E = Elite, reads only SE Elite credentials with unique matching keys. Works with iCLASS SE, iCLASS SR, standard iCLASS, SE for MIFARE Classic and SE for MIFARE DESFire EV1 with matching Elite keys. Line item on PO requires ICE reference number.

## “Bundles” Maintenance and Support

Description	Part Number
<b>PAM Firmware Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F. Includes M&S for pivCLASS Reader Services component.	900



## Validation Workstation

The pivCLASS Validation Workstation verifies TWIC, PIV, PIV-I, CIV, FRAC and CAC cards. It also verifies the cardholder's PIN using the card's contact interface. Validation Workstation matches the cardholder's stored biometric against a live sample and validates the card's digital certificate chain using OCSP or SCVP protocols. For TWIC cards, Validation Workstation queries the TWIC Canceled Card List (CCL) to determine revocation status. All FIPS 201 credentials are authenticated using PKI-AUTH or PKI-CAK protocols. pivCLASS Software Training is required to resell these products. See *Certification Training on page 19*. First year maintenance is mandatory and included with purchase.

Validation Workstation does not provide any PACS interoperability.

Include supplemental information for ordering this product. See *pivCLASS Supplemental Ordering Information on page 23*.

Description	Part Number
<p><b>pivCLASS Validation Workstation</b> Only includes pivCLASS Validation Workstation software and documentation. PACS interoperability not included. Requires a USB contact reader (OMNIKEY® 5422 recommended) and optional biometric sensor. See <i>USB Readers &amp; Credential Testing Aides on page 18</i>.</p>	PVC-D/S
<p><b>pivCLASS Validation Workstation Audit Trail Option</b> Includes Audit Trail software. Does not include any additional PACS interoperability.</p>	PVCAT-D

**Note:** The Validation Workstation requires a USB Smart Card reader, such as the OMNIKEY 5422 and optionally a USB fingerprint sensor<sup>1</sup>.

## Maintenance and Support

Description	Part Number
<p><b>pivCLASS Validation Workstation Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.</p>	PVC-D/S-MS
<p><b>pivCLASS Validation Workstation Audit Trail Option Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.</p>	PVCAT-D-MS

<sup>1</sup> Reference the Registration Engine data sheet for supported USB fingerprint sensors. Validation Workstation

# Registration Engine and Certificate Manager

The Registration Engine includes all the functionality of the Validation Workstation and the ability to interoperate with a PACS head-end collecting card information (such as name, FASC-N or UUID, expiration date and photo) and creating a card holder record in a PACS. The Certificate Manager provides the capability to revalidate registered cardholders on an ongoing basis. If a cardholder's certificate is invalid or revoked, Certificate Manager can automatically suspend the card in the PACS and send an email to a distribution list for notification. pivCLASS Software Training is required to resell these products. See *Certification Training on page 19*. First year maintenance and support is required and included with purchase.

Include supplemental information for ordering this product. See *pivCLASS Supplemental Ordering Information on page 23*.

Description	Part Number	
	Base Part No.	PACS ID
<b>pivCLASS Registration Engine</b> Includes software that interfaces with one (1) specific PACS and supporting documentation. One license per workstation. Requires a USB contact reader (OMNIKEY 5422 recommended) and optional USB biometric sensor. See <i>USB Readers &amp; Credential Testing Aides on page 18</i> .	PVCP-D/S-	XX-YY <sup>1</sup>
<b>pivCLASS PACS Plugin Change</b> Use this part number to change your pivCLASS PACS Plugin license from one PACS headend vendor product to another. Maintenance & Support for this plugin is provided as part of the pivCLASS Registration Engine M&S.	PVCAT-D	XX-YY <sup>1</sup>
<b>pivCLASS Certificate Manager</b> Includes software only. One license per PACS. Second license required for redundant PACS if present.	PVC-CM	N/A
<b>pivCLASS Certificate Manager - Redundant Copy</b> For use as hot-spare redundancy. Includes software and supporting documentation.	PVC-CM-REDNT	N/A

**Note:** The registration engine requires a USB Smart Card reader such as the OMNIKEY 5422 and optionally a USB fingerprint sensor. Reference data sheet for supported USB fingerprint sensors.

## Maintenance and Support

Description	Part Number
<b>pivCLASS Registration Engine Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVCP-D/S-MS
<b>pivCLASS Certificate Manager Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-CM-MS
<b>pivCLASS Certificate Manager Standard Maintenance &amp; Support - Redundant Copy</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-CM-REDNT-MS

<sup>1</sup> To determine the identifiers for entry, see *pivCLASS PACS Plug-in & Connector Information on page 22*.

- XX = PACS Product ID
- YY = PACS Version ID



## Reader Services

Reader Services provides the interface to manage and control readers and authentication modules such as the PAM. For certification training, see *Certification Training on page 19*. First year maintenance is mandatory and included with purchase.

Include supplemental information for ordering this product. See *pivCLASS Supplemental Ordering Information on page 23*.

Description	Part Number
<b>pivCLASS Reader Services</b> Includes software and supporting documentation. Reader Services is included in the purchase of a PAM. If used without a PAM, one copy per reader is required.	PVC-FXRDR
<b>pivCLASS Reader Services - Redundant Copy</b> For use as hot-spare redundancy. Includes software and supporting documentation.	PVC-FXRDR-REDNT


## Maintenance and Support

Description	Part Number
<b>pivCLASS Reader Services Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-FXRDR-MS
<b>pivCLASS Reader Services Standard Maintenance &amp; Support - Redundant Copy</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-FXRDR-REDNT-MS

# pivCLASS Authentication Module (PAM)

Order the pivCLASS Authentication Module using the following part numbers. The PAM supports up to two (2) pivCLASS readers. Purchase includes the pivCLASS Reader Services component required for operation. pivCLASS PKI @ The Door training required to resell this component. See *Certification Training on page 19*. First year maintenance is mandatory and included with purchase.

Include supplemental information for ordering this product. See *pivCLASS Supplemental Ordering Information on page 23*.

Description		Part Number			
		Base Part Number	Product Version	Packaging	Configuration Settings
<p><b>pivCLASS Authentication Module</b>                      Model: M2000                      Authentication module hardware, firmware and installation manuals. Includes pivCLASS Reader Services component.</p>		91000	B	B = Plastic Enclosure Back plate & Cover N = No enclosure (board only)	NNN = Default

## Maintenance and Support

Description	Part Number
<p><b>PAM Firmware Standard Maintenance &amp; Support</b>                      One year renewal of standard Maintenance and Support service. 8x5 Central M-F. Includes M&amp;S for pivCLASS Reader Services component.</p>	91000-MS

## pivCLASS Passage

pivCLASS Passage allows a PC or a mobile reader to send a Wiegand signal to a control panel to open a door or gate after a successful card validation. Use Passage with either pivCLASS Desktop or pivCLASS Mobile software. This product consists of two components, Passage software and Passage Converter Board, both of which are required. First year maintenance is mandatory and included with purchase.

Include supplemental information for ordering this product. See *pivCLASS Supplemental Ordering Information on page 23*.

Description	Part Number
<b>pivCLASS Passage Software</b> Software that receives the credential information (for example, from pivCLASS Mobile) and sends the identifier data to the Converter Board.	PVC-PAS
<b>pivCLASS Passage Software - Redundant Copy</b> For use as hot-spare redundancy. Includes software and supporting documentation.	PVC-PAS-REDNT
<b>pivCLASS Passage Converter Board</b> Hardware board that converts the received valid identifier into Wiegand format and sends it to PACS. One board per access point is required.	PVC-PCB

## Maintenance and Support

Description	Part Number
<b>pivCLASS Passage Software Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-PAS-MS
<b>pivCLASS Passage Software Standard Maintenance &amp; Support - Redundant Copy</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-PAS-REDNT-MS

# pivCLASS IDPublisher

This web service product enables the provisioning and de-provisioning of credentials from an IDMS, CMS or HR data base into a PACS. First year maintenance is mandatory and included with purchase.

Include supplemental information for ordering this product. See *pivCLASS Supplemental Ordering Information on page 23*.

Description	Part Number
<b>pivCLASS IDPublisher 500</b> 500 badge capacity. You must also order the appropriate PACS-SVC component listed below.	PVC-IDPUB500
<b>pivCLASS IDPublisher 1000</b> 1000 badge capacity. You must also order the appropriate PACS-SVC component listed below.	PVC-IDPUB1000
<b>pivCLASS IDPublisher UNL</b> Unlimited badge capacity. You must also order the appropriate PACS-SVC component listed below.	PVC-IDPUBUNL
<b>pivCLASS IDPublisher 500 - Redundant Copy</b> For use as hot-spare redundancy. Includes software and supporting documentation. You must also order the appropriate PACS-SVC component listed below.	PVC-IDPUB500-REDNT
<b>pivCLASS IDPublisher 1000 - Redundant Copy</b> For use as hot-spare redundancy. Includes software and supporting documentation. You must also order the appropriate PACS-SVC component listed below.	PVC-IDPUB1000-REDNT
<b>pivCLASS IDPublisher UNL - Redundant Copy</b> For use as hot-spare redundancy. Includes software and supporting documentation. You must also order the appropriate PACS-SVC component listed below.	PVC-IDPUBUNL-REDNT
<b>pivCLASS PACS Service Component</b> Includes pivCLASS PACS Plug-in software and documentation. This component must accompany any pivCLASS IDPublisher order to provide the correct PACS identifier. Annual maintenance and support included in IDPublisher M&S.	PACS-SVC-XX-YY <sup>1</sup>

<sup>1</sup> To determine the identifiers for entry, see *pivCLASS PACS Plug-in & Connector Information on page 22*.

- XX = PACS Product ID
- YY = PACS Version ID

## Maintenance and Support

Description	Part Number
<b>pivCLASS IDPublisher 500 Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-IDPUB500-MS
<b>pivCLASS IDPublisher 1000 Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-IDPUB1000-MS
<b>pivCLASS IDPublisher UNL Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-IDPUBUNL-MS
<b>pivCLASS IDPublisher 500 Standard Maintenance &amp; Support - Redundant Copy</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-IDPUB500-REDNT-MS
<b>pivCLASS IDPublisher 1000 Standard Maintenance &amp; Support - Redundant Copy</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-IDPUB1000- REDNT-MS
<b>pivCLASS IDPublisher UNL Standard Maintenance &amp; Support - Redundant Copy</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-IDPUBUNL- REDNT-MS

## pivCLASS MultiPACS

MultiPACS allows for the simultaneous provisioning and de-provisioning of identity and credential records into multiple and disparate physical access control systems (PACS). The MultiPACS system supports multiple Registration Engines, pivCLASS Mobile with PACS Registration Engines and IDPublishers or any combination. It consists of multiple components, including a MultiPACS Console and one MultiPACS Connector for each PACS head-end serviced. It also requires a Certificate Manager (sold separately). First year maintenance is mandatory and included with purchase. Include supplemental information for ordering this product.

See *pivCLASS Supplemental Ordering Information on page 23*.

Description	Part Number	
	Base Part Number	PACS ID
<b>pivCLASS MultiPACS Console</b> Provides management interface to the system.	PVC-MPX-CNSL	N/A
<b>pivCLASS MultiPACS Console - Redundant Copy</b> For use as hot-spare redundancy. Includes software and supporting documentation.	PVC-MPX-CNSL-REDNT	N/A
<b>pivCLASS MultiPACS Connector</b> A PACS specific connector is required for each separate PACS being serviced.	PVC-MPX-CNX-	XX-YY <sup>1</sup>
<b>pivCLASS MultiPACS Connector - Redundant Copy</b> For use as hot-spare redundancy. Includes software and supporting documentation.	PVC-MPX-CNX-REDNT	N/A

## Maintenance and Support

Description	Part Number
<b>pivCLASS MultiPACS Console Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-MPX-CNSL-MS
<b>pivCLASS MultiPACS Console Standard Maintenance &amp; Support - Redundant Copy</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-MPX-CNSL-REDNT-MS
<b>pivCLASS MultiPACS Connector Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-MPX-CNX-MS
<b>pivCLASS MultiPACS Connector Standard Maintenance &amp; Support - Redundant Copy</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-MPX-CNX-REDNT-MS

<sup>1</sup> To determine the identifiers for entry, see *pivCLASS PACS Plug-in & Connector Information on page 22*.

- XX = PACS Product ID
- YY = PACS Version ID

# pivCLASS Mobile Validation Software

The pivCLASS mobile validation software products are designed to run on the various supported mobile handheld readers listed in this HTOG. These readers are purchased separately. First year maintenance and support is required for the pivCLASS mobile software and is included with purchase.

pivCLASS Mobile Validator is a handheld software application that verifies PIV, PIV-I, CIV, TWIC, FRAC, CAC and other<sup>1</sup> credentials over a mobile handheld reader’s contact or contactless interface. Provides full validation including path validation and revocation status checking. Does not include PACS registration functionality.

pivCLASS Mobile Registration Engine software provides all the functionality of the Mobile Validator plus the functionality to register FIPS 201 credentials into a PACS. Includes PACS Plug-in to provide PACS interoperability.

Include supplemental information when ordering this product. See *pivCLASS Supplemental Ordering Information on page 23*.

Description	Part Number	
	Base Part Number	PACS ID
<b>pivCLASS Mobile Validator</b> Includes software and supporting documentation. Does not include the mobile reader.	OMNP-SW	N/A
<b>pivCLASS Mobile Registration Engine</b> Includes software and supporting documentation. Does not include the mobile reader.	OMNPR-SW-	XX-YY <sup>2</sup>

## Maintenance and Support

Description	Part Number
<b>pivCLASS Mobile Validator Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	OMNP-MS
<b>pivCLASS Mobile Registration Engine Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	OMNPR-MS

<sup>1</sup> Verification of other non-FIPS 201 cards such as MIFARE DESFire and Prox requires the pivCLASS Data Import software and compatible handheld reader.

<sup>2</sup> To determine the identifiers for entry, see *pivCLASS PACS Plug-in & Connector Information on page 22*.

- X = PACS Product ID
- YY = PACS Version ID



## pivCLASS Data Import

pivCLASS Data Import is a software application that keeps the pivCLASS PACS Service credential database synchronized with the head-end PACS database. When Data Import detects a change in the PACS database it updates the pivCLASS PACS Service credential database accordingly. These updates are then pushed out to mobile devices on demand or in batch during the next mobile device data synchronization. Data Import can be thought of as retrieving cardholder data from the PACS database versus pushing cardholder data to the PACS database as is done during registration. Data Import can be used to download any supported card type to the handhelds, e.g., FIPS 201, HID® proximity, HID iCLASS, DESFire, etc. Please ensure that the handheld selected has the appropriate card reader. First year maintenance and support is required and included with purchase.

PACS products supported by Data Import are listed in the *pivCLASS PACS Plug-in & Connector Information on page 22*.

Include supplemental information when ordering this product. See *pivCLASS Supplemental Ordering Information on page 23*.

Description	Part Number
<b>pivCLASS Data Import</b> Includes software and supporting documentation.	PVC-DTAIMP-XX-YY <sup>1</sup>
<b>pivCLASS Data Import - Redundant Copy</b> For use as hot-spare redundancy. Includes software and supporting documentation.	PVC-DTAIMP-REDNT-XX-YY <sup>1</sup>

## Maintenance and Support

Description	Part Number
<b>pivCLASS Data Import Standard Maintenance &amp; Support</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-DTAIMP-MS
<b>ppivCLASS Data Import Standard Maintenance &amp; Support - Redundant Copy</b> One year renewal of standard Maintenance and Support service. 8x5 Central M-F.	PVC-DTAIMP-REDNT-MS

<sup>1</sup> To determine the identifiers for entry, see *pivCLASS PACS Plug-in & Connector Information on page 22*.

**Note:** Not all PACS head-end products are supported.

- XX = PACS Product ID
- YY = PACS Version ID

# USB Readers & Credential Testing Aides

USB smart card readers and biometric sensors are used during cardholder registration to ensure that the person who is presenting the card is the person to whom it was issued. The pivCLASS products are compatible with the following devices.

## USB Reader and Biometric Sensor

Description	Part Number
<p><b>OMNIKEY Smart Card Reader</b>                      OMNIKEY 5422 USB smart card reader. Contact reader. EMV, CCID and TAA compliant. Recommended for use with the pivCLASS Validation Workstation and the pivCLASS Registration Engine.</p>	R54220301
<p><b>MorphoTrak Biometric Sensor</b>                      MorphoTrak MS00-1300B-P biometric sensor. USB biometric sensor for use with the pivCLASS Registration Engine during enrollment and registration.</p>	MSO-1300E

## Credential Testing Aides

Use these test card kits to ensure that your pivCLASS components have been properly set up and to verify that your system correctly detects potential compromises as the result of altered data on the smart card.

Description	Part Number
<p><b>PIV Test Card kit</b>                      Includes 3 cards - 2 of which are golden cards with no errors and the remaining 1 has been revoked. The package also includes CA certificates the associated CRL.  <b>Note:</b> This part is included in the evaluation kit - order this part as additional or replacement cards.</p>	01-0032-01
<p><b>Legacy Test Card kit containing iCLASS &amp; HID® Prox cards</b>                      Includes 1 x standard iCLASS card and 1 x HID Prox card.  <b>Note:</b> This part is included in the evaluation kit - order this part as additional or replacement cards.</p>	6712-311-01



## Certification Training

Completion of pivCLASS Software training is required to resell any pivCLASS software.

Completion of pivCLASS PKI @ The Door training is required to resell pivCLASS Authentication Modules (PAMs) and pivCLASS Bundles.

Completion of pivCLASS Software and pivCLASS PKI @ The Door training is required to purchase pivCLASS Evaluation Kits.

pivCLASS Software v1.2 Certification Training consists of an introductory PKI & FIPS online course and other modules focused on the pivCLASS software components that make up the pivCLASS solution. These include the pivCLASS Registration Engine, Certificate Manager and various pivCLASS products used to connect this software to external components such as PACS head-end platforms, Identity Management systems, Card Management Systems and Human Resource databases.

To enroll go to [hidglobal.com](http://hidglobal.com) > Services > Training > Browse Courses > Product Certifications

Description
<p><b>pivCLASS Software v1.2 Certification Training</b>            Web based training covering pivCLASS Registration Engine, Certificate Manager and specific PACS Plugins.            Documentation included. Register for this course at <a href="http://www.hidglobal.com/hid-academy">http://www.hidglobal.com/hid-academy</a> This is a no charge item.</p>
<p><b>pivCLASS PKI at the Door v5.x Certification Training</b>            Web based training focused on installing, configuring and troubleshooting the pivCLASS Authentication Module (PAM) v5.x            Software, documentation and limited demo license included. Register for this course at <a href="http://www.hidglobal.com/hid-academy">http://www.hidglobal.com/hid-academy</a></p>

# Reader Programming Cards

Reader programming cards are used to reconfigure a reader to a desired target configuration by using Reader Configuration Cards. Firmware Update Cards can be used to reload the reader with the latest version of firmware. Contact HID Technical Support ([www.hidglobal.com/customer-service](http://www.hidglobal.com/customer-service)) to ensure selecting the proper configuration card extension.

## Reader Configuration Cards

Description	Part Number		
	Base Part Number	iCLASS Security Keys	Configuration Card Extension
<b>Reader Mode and Output Configuration Settings</b> Use these part numbers to order configuration cards to change reader modes (for example, Wiegand to PAM) and output formats (for example, 200 bit Wiegand). Includes reader configuration programming card and instructions	SEC9X-CRD-	O = Standard E = Elite	-XXXX = Specific configuration <sup>1</sup>
<b>Reset Beeper / LED, Keypad and IPM to Factory Defaults</b> Use these part numbers to order configuration cards to reset reader settings to factory defaults. Includes reader configuration programming card and instructions	SEC9X-CRD-	O = Standard E = Elite	-XXXX = Specific configuration <sup>2</sup>

<sup>1</sup> Contact your HID GLOBAL Support Representative (<https://support.hidglobal.com>) to determine your specific configuration extension.

<sup>2</sup> Factory Default configuration includes: LED normally red, beep on and flashes green on read card; keypad data = buffer one key, no parity, 4 bit message, Intelligent Power Management = Off; Prox reads 125 kHz HID Prox, AWID, EM4102.

## Firmware Update Cards

For updating reader interpreters and other functionality to the latest firmware version over an RF interface.

Description	Part Number			
	Base Part Number	iCLASS Security Keys	Version	Update Card Extension
<b>Programming Cards - Firmware</b> Includes latest version of reader firmware on a RF programming card and instructions.	SEF9X-UPG-	O = Standard E = Elite	E = Rev E Version	-XXXX <sup>1</sup>

<sup>1</sup> Contact your HID Support Representative ([www.hidglobal.com/customer-service](http://www.hidglobal.com/customer-service)) to obtain the Firmware Update Card extension.

## Reader Accessories

Part Number	Description
<b>Mounting Plates, Spacers, Screws and Accessory Kits</b>	
<b>6303-104-01</b>	R10* (or equivalent size model) Mini-Mullion Reader Mounting Plate, Any Color
<b>6309-103-01</b>	R15 (or equivalent size model) Mullion Reader Mounting Plate, Any Color
<b>6403-109-01</b>	R40* (or equivalent size model) Wall Switch Reader Mounting Plate, Any Color
<b>6132AKB</b>	R10 (or equivalent size model) Reader Spacer, Black
<b>6132AGB</b>	R10 (or equivalent size model) Reader Spacer, Gray
<b>6132AKC</b>	R15 (or equivalent size model) Reader Spacer, Black
<b>6132AGC</b>	R15 (or equivalent size model) Reader Spacer, Gray
<b>6132AKE</b>	R40 (or equivalent size model) Reader Spacer, Black
<b>6132AGE</b>	R40 (or equivalent size model) Reader Spacer, Gray
<b>6132AK</b>	RK40 (or equivalent size model) Reader Spacer, Black
<b>6132AG</b>	RK40 (or equivalent size model) Reader Spacer, Gray
<b>6132AKK</b>	RKCL40 (or equivalent size model) Reader Spacer, Angle Right, Black
<b>6132AKL</b>	RKCL40 (or equivalent size model) Reader Spacer, Angle Left, Black
<b>6132AKK</b>	RKCLB40 (or equivalent size model) Reader Spacer, Angle Right, Black
<b>6132AKL</b>	RKCLB40 (or equivalent size model) Reader Spacer, Angle Left, Black
<b>6714-119-01</b>	RKCL40 Wall Plate, two piece, Black
<b>6714-305-01</b>	RKCL40 Mounting Plate for two piece Wall Plate, Black
<b>6700-300-02</b>	Reader Accessory Kit (includes terminal blocks, screws and installation guide)
<b>6714-306-04</b>	Reader Accessory Kit (includes terminal blocks, screws and installation guide for reader with side car)
<b>400-2D71-06</b>	Security Screw
<b>IP65GSKT-R10</b>	Kit containing 10 gaskets, IP65, R10 size; highly recommended for outdoor installations
<b>IP65GSKT-R15</b>	Kit containing 10 gaskets, IP65, R15 size; highly recommended for outdoor installations
<b>IP65GSKT-R40</b>	Kit containing 10 gaskets, IP65, R40 size; highly recommended for outdoor installations
<b>IP65GSKT-RK40</b>	Kit containing 10 gaskets, IP65, RK40 size; highly recommended for outdoor installations

# pivCLASS PACS Plug-in & Connector Information

Use this table to complete the Registration Engine, Multi PACS Connector, or Data Import PACS ID part number extension.

Vendor	Product Name	Latest Validated Product Version	Vendor #	Version #
Advantor	ASN	6	33	00
AMAG	Symmetry	6,7,8	01	00
Amano McGann	AmanoNet	7.7	25	00
AMT	WebBrix	4.1	02	00
Apollo	APACS	3.8	31	00
Avigilon (RedCloud)	ACM	5.4.9	18	00
Brivo	OnSite Server	3.4.0	03	00
Brivo	OnAir for Government		03	01
CBORD	CS Gold	7.0.4	30	00
Continental Access	CA 3000	2.11	04	00
DAQ Electronics	StarWatch SMS	5.3.462 (does not support Data Import)	29	00
Datawatch	D3000	(Does not support Data Import)	05	00
DSX	WinDSX	4.10	06	00
Feenics	Keep	3.0	34	00
Galaxy	System Galaxy	10.4.1	32	00
Gallagher	Command Centre	7.6	07	00
Genetec	Security Center	5.7 SR2	27	00
Hirsch-Identive	Velocity	3.1	08	00
Honeywell	EBI	R500	09	01
Honeywell	Pro-Watch	4.4	09	02
Identicard	PremiSys	2.17	10	00
Johnson Controls	P2000	v3.13	11	00
Kantech	EntraPass	7.41	12	00
Keyscan	System VII	7 (Does not support Data Import)	13	00
Lenel	OnGuard	7.4	14	00
Matrix Systems	Frontier	4.7.1	15	00
MonDyn	SafeNET		26	00
Open Options	DNA Fusion	6.6	16	00
Quintron	AccessNsite	7.9.5	17	00
RS2 Technologies	AccessIt!	5.6.0.5	19	00
S2	NetBox	4.9	20	00
Sielox	Pinnacle	9	21	00
Siemens	SiPass	2.7	22	00
Software House	CCURE 800	10.0	23	01
Software House	CCURE 9000	2.50	23	02
UTC	Facility Commander Wnx	7.5, 7.6, 7.7	24	01
UTC	Picture Perfect	4.5.1	24	02

**Note:** Plug-in functionality varies according to the capabilities of the PACS headend product. Contact your HID® Sales Representative for details.



# pivCLASS Supplemental Ordering Information

Include the following information with your order for all pivCLASS software products including bundles and evaluation kits.

<b>Integrator/Installer Contact Information</b>
Company Name
Company Contact Name
Company contact email for software download instructions
<b>End User Information</b>
End User Company Name
End User location where product will be deployed
Access Control System used at this location
Access Control System version
Type of IDMS, CMS or HR database if IDPublisher is being ordered
<b>For pivCLASS Software Support Renewals ONLY</b>
Support Renewal Start Date
Support Renewal End Date

This page is intentionally left blank



This page is intentionally left blank

